

Nicht enthalten/(Not included)

Nicht enthalten(Not included)

2

[illegible]

CW NW WW
↔
6500K 4000K 2700K

6

Diagram illustrating an incorrect connection. A 3-pin plug is shown being inserted into a 2-pin outlet. A red arrow points to the ground pin, which is not connected to the outlet, labeled "NO".

ON